

# EPOQUE

Form | Shape | Forma  
10630 | Epoque



Teekannen-Unterteil | *Base teapot* | Teiera senza coperchio  
0,40 ltr. | 14 oz. **34211**  
0,70 ltr. | 24 2/3 oz. **34221**

Deckel | *Lid* | Coperchio  
0,40 ltr. **34212**  
0,70 ltr. **34222**



Kaffeekannen-Unterteil | *Base coffee pot* | Caffettiera senza coperchio  
0,30 ltr. | 10 1/2 oz. **34001**  
0,65 ltr. | 23 7/8 oz. **34026**

Deckel | *Lid* | Coperchio  
0,30 ltr. **34002**  
0,65 ltr. **34027**



Gießer | *Creamer* | Lattiera  
0,03 ltr. | 1 oz. **34403**  
0,15 ltr. | 5 1/4 oz. **34415**  
0,17 ltr. | 6 oz. **34417**  
0,30 ltr. | 10 1/2 oz. **34430**



Zuckerdosens-Unterteil | *Base sugar bowl* | Zuccheriera senza coperchio  
0,25 ltr. | 8 3/4 oz. **34341**

Deckel | *Lid* | Coperchio **34342**  
Deckel mit Einschnitt | *Lid with indent* | Coperchio con tacca **35192**



Schälchen | *Tray* | Coppetta  
8 cm | 3 1/8 in. **35401**  
10 cm | 4 in. **35402**



Eierbecher | *Egg cup* | Portauovo **35520**

Eierbecher mit Ablage | *Flanged egg cup* | Portauovo **35525**

**Dekor | Decor | Decoro**  
**800001 | weiß | white | bianco**



Espresso-Obertasse | *Cup* | Tazza  
 0,10 ltr. | 3 1/2 oz. **34712**  
 Untertasse | *Saucer* | Piattino  
 12 cm | 4 3/4 in. **34611**



Obertasse stapelfähig | *Cup* | Tazza  
 0,18 ltr. | 6 1/3 oz. **34682**  
 Untertasse | *Saucer* | Piattino  
 14 cm | 5 1/2 in. **34631**



Espresso doppio-Obertasse | *Cup* | Tazza  
 0,16 ltr. | 5 5/8 oz. **34722**  
 Untertasse | *Saucer* | Piattino  
 14 cm | 5 1/2 in. **34631**



Obertasse | *Cup* | Tazza  
 0,19 ltr. | 6 2/3 oz. **34632**  
 Untertasse | *Saucer* | Piattino  
 14 cm | 5 1/2 in. **34631**



Cappuchino-Obertasse | *Cup* | Tazza  
 0,23 ltr. | 8 oz. **34730**  
 Untertasse | *Saucer* | Piattino  
 14 cm | 5 1/2 in. **34631**



Stapeltasse | *Cup stackable* | Tazza impilabile  
 0,18 ltr. | 6 1/3 oz. **34683**  
 Untertasse | *Saucer* | Piattino  
 14 cm | 5 1/2 in. **34631**



Combi Untertasse | *Saucer Combi* | Piattino combi  
 16 cm | 6 1/4 in. **34645**



Stapeltasse | *Cup stackable* | Tazza impilabile  
 0,22 ltr. | 7 3/4 oz. **34697**  
 Untertasse | *Saucer* | Piattino  
 14 cm | 5 1/2 in. **34631**

# EPOQUE

10

Rosenthal | Hotel & Restaurant Service | Epoque | 10630

Form | Shape | Forma  
10630 | Epoque



Teller flach | *Plate flat* | Piatto piano  
 17 cm | 6 32/3 in.      31117  
 19 cm | 7 1/2 in.      31119  
 22 cm | 8 2/3 in.      31122  
 26 cm | 10 1/4 in.      31126  
 28 cm | 11 in.      31128  
 31 cm | 12 1/4 in.      31131



Teller tief | *Plate deep* | Piatto fondo  
 21 cm | 8 1/4 in.      31221  
 24 cm | 9 1/2 in.      31224



Suppentasse | *Soup cup* | Tazza brodo  
 0,27 ltr. | 9 1/2 oz.      30422



Suppenbowl stapelfähig | *Soup bowl* | Coppa brodo  
 0,27 ltr. | 9 1/2 oz.      30427



Platte oval | *Platter oval* | Piatto ovale  
 28 cm | 11 in.      32628  
 33 cm | 13 in.      32633



Combi Untertasse | *Saucer Combi* | Piattino combi  
 16 cm | 6 1/4 in.      34645



Buttersauciere | *Buttersauceboat* | Salsiera burro  
 0,10 ltr. | 3 1/2 oz.      35072



Sauciere mit Fuß | *Sauceboat* | Salsiera  
 0,30 ltr. | 10 1/2 oz.      31610

Dekor | *Decor* | Decoro  
800001 | weiß | *white* | bianco



Bowl | *Bowl, small* | Coppetta, piccola  
8 cm | 3 1/8 in. **30608**



Kompott | *Fruit* | Coppetta  
12 cm | 4 3/4 in. **30512**



Schüssel | *Salad bowl* | Insalatiera  
14 cm | 5 1/2 in. **33014**  
16 cm | 6 1/4 in. **33016**  
18 cm | 7 in. **33018**  
21 cm | 8 1/4 in. **33021**



Salzstreuer | *Salt* | Spargisale **35030**  
Pfefferstreuer | *Pepper* | Spargipepe **35035**



Ascher | *Ashtray* | Posacenere  
10 cm | 4 in. **37010**

# ACCENTI DUE

38

Rosenthal | Hotel & Restaurant Service | Epoque / Accenti due | 10630

Form | Shape | Forma  
10630 | Epoque / Accenti due



Platzteller | Service plate | Piatto segnaposto  
33 cm | 13 in. **31163**

Teller flach | Plate flat | Piatto piano  
18 cm | 7 in. **30018**



Gourmetteller flach mit breiter Fahne |  
Gourmet plate flat with broad rim | Piatto piano gourmet a falda larga  
33 cm | 13 in. **31173**

Gourmetteller flach | Gourmet plate flat | Piatto piano gourmet  
17 cm | 6 2/3 in. **31178**  
20 cm | 8 in. **31175**  
23 cm | 9 in. **31177**  
28 cm | 11 in. **31174**



Teller flach quadratisch »Quadrondo« | Plate flat square |  
Piatto piano quadrato  
13 cm | 5 1/8 in. **31363**  
32 cm | 12 5/8 in. **31382**



Teller flach dreieckig »Triolog« | Plate flat triangular |  
Piatto piano triangolare  
15 cm | 6 in. **31165**  
23 cm | 9 in. **31169**  
32 cm | 12 5/8 in. **31172**

Dekor | *Decor* | Decoro  
 800001 | weiß | *white* | bianco



Teller tief dreieckig »Triolog« | *Plate deep triangular* |  
 Piatto fondo triangolare  
 27 cm | 10 5/8 in. **31551**



Gourmetteller Coupe | *Gourmet plate coupe* | Piatto coupe gourmet  
 33 cm | 13 in. **31463**



Gourmetteller tief | *Gourmet plate deep* | Piatto fondo gourmet  
 13 cm | 5 1/8 in. **31313**  
 18 cm | 7 in. **31318**  
 21 cm | 8 1/4 in. **31321**  
 25 cm | 9 7/8 in. **31225**  
 30 cm | 11 3/4 in. **31230**



Teller tief (flache Fahne) »Gourmetto« | *Plate deep* | Piatto fondo  
 27 cm | 10 5/8 in. **31327**

# ACCENTI DUE

40

Rosenthal | Hotel & Restaurant Service | Epoque / Accenti due | 10630

Form | Shape | Forma  
10630 | Epoque / Accenti due



Gourmetteller tief oval | *Gourmet plate deep oval* |  
Piatto fondo ovale gourmet  
36 cm | 14 1/8 in. **31256**



Gourmetplatte flach rechteckig | *Gourmet platter rectangular* |  
Piatto piano rettangolare gourmet  
27 cm | 10 5/8 in. **32777**  
34 cm | 13 1/2 in. **32783**  
42 cm | 16 1/2 in. **32792**



Teller quadratisch | *Plate square* | Piatto quadrato  
20 cm | 8 in. **31420**



Platte flach rechteckig | *Platter rectangular* | Piatto piano rettangolare  
18 x 13 cm | 7 in. **32962**

Dekor | Decor | Decoro  
800001 | weiß | white | bianco



Schale »Oasis« | Plate »Oasis« | Coppetta »Oasis«  
22 cm | 8 2/3 in. **35422**



Schale oval »Gondel« | Plate deep »Gondola« |  
Piatto fondo »Gondola«  
30 cm | 11 3/4 in. **35373**

 


Gourmetdose-Unterteil | Gourmet essence cup base |  
Ciotola gourmet senza coperchio  
0,14 ltr. | 5 oz. **35161**

Deckel | Lid | Coperchio  
0,14 ltr. | 5 oz. **35162**

Gourmetsuppentasse-Unterteil | Gourmet soup cup base |  
Ciotola brodo gourmet senza coperchio  
0,37 ltr. | 13 oz. **30751**  
0,65 ltr. | 22 7/8 oz. **30756**

Deckel | Lid | Coperchio  
0,37 ltr. | 13 oz. **30752**  
0,65 ltr. | 22 7/8 oz. **30757**

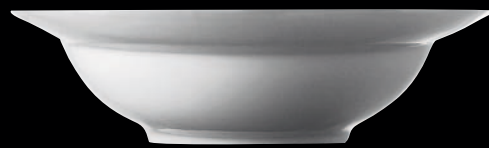

Gourmetschüssel | Gourmet bowl | Coppa gourmet  
28 cm | 11 in. **33178**  
32 cm | 12 5/8 in. **33182**

# ACCENTI DUE

 
Form | Shape | Forma  
10630 | Epoque / Accenti due



Platte flach rechteckig | *Platter rectangular* |  
Piatto piano rettangolare  
27 x 19 cm | 10 5/8 in. **32677**



Teller/Platte flach quadratisch | *Plate flat square* |  
Piatto piano quadrato  
27 x 27 cm | 10 5/8 in. **31421**

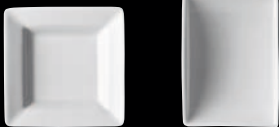

Schälchen quadratisch | *Bowl square* | Coppetta quadrata  
8 cm | 3 1/8 in. **35471**

Schale rechteckig »Wippe« | *Bowl rectangular »Seasaw«* |  
Coppetta rettangolare »Altalena«  
9 cm | 3 1/2 in. **35371**



Schale oval »Gondel« | *Bowl oval »Gondola«* |  
Coppetta ovale »Gondola«  
14 cm | 5 1/2 in. **35372**

Schale dreieckig »Dreizack« | *Bowl triangular »Trident«* |  
Coppetta triangolo »Tridente«  
10 cm | 4 in. **35374**



Schale rund »Rondell« | *Bowl round »Rondel«* | Coppetta »Rondella«  
10 cm | 4 in. **35375**

Schälchen rund | *Bowl round* | Coppetta  
9 cm | 3 1/2 in. **35409**



Zuckerbriefchenbehälter | *Bowl for sachets of sugar* | Portabustine  
11 x 6 cm | 4 1/3 in. **35550**

Zahnstocherbehälter | *Toothpickholder* | Portastuzzicadenti  
7 cm | 2 3/4 in. **35528**



Eierbecher / Teelicht | *Egg cup / votive* | Portauovo / lumino  
**35526**

Ascher rechteckig | *Ashtray rectangular* | Posacenere rettangolare  
8 x 9 cm | 3 1/8 in. **37008**

Dekor | *Decor* | Decoro  
800001 | weiß | *white* | bianco



Platte oval | *Platter oval* | Piatto ovale  
36 cm | 14 1/8 in. 32882

Form | *Shape* | Forma  
10727 | Airline



Ascher rund | *Ashtray round* | Posacenere  
7 cm | 2 3/4 in. 37007

Form | *Shape* | Forma  
14210 | Scrittura



Schale »Scrittura« | *Bowl* | Coppetta  
40 cm | 15 3/4 in. 25658

Form | *Shape* | Forma  
10850 | Amici



Pizzateller | *Pizza plate* | Piatto pizza  
32 cm | 12 5/8 in. 15320

# AOC

44

Rosenthal | Hotel & Restaurant Service | Epoque / AOC | 10630

Form | Shape | Forma  
10630 | Epoque / AOC



Espresso | Cup | Tazza  
0,08 ltr. | 2 7/8 oz. **34732**  
Untertasse | Saucer | Piattino  
12 cm | 4 3/4 in. **34731**



Cappuccino | Cup | Tazza  
0,22 ltr. | 7 3/4 oz. **34852**  
Untertasse | Saucer | Piattino  
15 cm | 6 in. **34851**



Caffé nieder | Cup | Tazza  
0,18 ltr. | 6 1/3 oz. **34882**  
Untertasse | Saucer | Piattino  
15 cm | 6 in. **34851**



Café au lait | Cup | Tazza  
0,38 ltr. | 13 3/8 oz. **34676**  
Untertasse | Saucer | Piattino  
17 cm | 6 2/3 in. **34677**



Gießer | Creamer | Lattiera  
0,30 ltr. | 10 1/2 oz. **34430**  
Zuckerdosens-Unterteil | Base sugar bowl | Zuccheriera senza coperchio  
0,25 ltr. | 8 3/4 oz. **34341**  
Deckel | Lid | Coperchio **34342**  
Deckel mit Einschnitt | Lid with indent | Coperchio con tacca  
**35192**

Dekor | *Decor* | Decoro  
 800001 | weiß | *white* | bianco



Espresso Ristretto | *Cup* | Tazza  
 0,08 ltr. | 2 7/8 oz. **34734**  
 Untertasse | *Saucer* | Piattino  
 12 cm | 4 3/4 in. **34731**



Caffé hoch | *Cup* | Tazza  
 0,25 ltr. | 8 7/8 oz. **34865**  
 Untertasse | *Saucer* | Piattino  
 15 cm | 6 in. **34851**



Caffé hoch | *Cup* | Tazza  
 0,18 ltr. | 6 1/3 oz. **34862**  
 Untertasse | *Saucer* | Piattino  
 15 cm | 6 in. **34851**



Latte macchiato | *Cup* | Tazza  
 0,35 ltr. | 12 1/3 oz. **34872**  
 Untertasse | *Saucer* | Piattino  
 15 cm | 6 in. **34851**



 
Jumbo bowl | *Jumbo bowl* | Tazza jumbo  
 0,63 ltr. | 22 1/8 oz. **34782**  
 Teller flach | *Plate flat* | Piatto piano  
 22 cm | 8 2/3 in. **31122**  
 26 cm | 10 1/4 in. **31126**

# ACCENTI TRE

66

Rosenthal | Hotel & Restaurant Service | New Epoque / Accenti tre | 10635

Form | *Shape* | Forma  
 10635 | New Epoque / Accenti tre

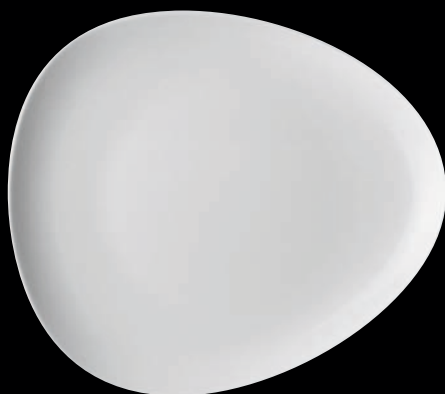


Teller flach dreieckig | *Plate flat triangle* |  
 Piatto piano triangolare  
 23 cm | 9 in. **31701**  
 29 cm | 11 3/8 in. **31702**



Gourmetteller tief Coupe | *Gourmet plate deep coupe* |  
 Piatto gourmet fondo coupe  
 17 cm | 6 2/3 in. **31517**  
 23 cm | 8 1/2 in. **31522**  
 28 cm | 11 in. **31528**



Ringschale »Centurio« | *Ring bowl »Centurio«* |  
 Coppa ad anello »Centurio«  
 30 cm | 11 3/4 in. **35376**  
 41 cm | 16 1/8 in. **35377**

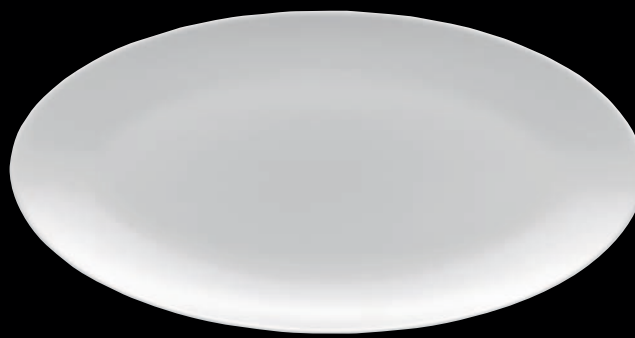 

Platte oval | *Platter oval* | Piatto ovale  
 35 cm | 13 3/4 in. **32635**  
 42 cm | 16 1/2 in. **32642**

Dekor | Decor | Decoro  
800001 | weiß | white | bianco




Schale | Bowl/cereal bowl | Coppa cereali  
15 cm | 6 in. **35415**

Schüssel | Bowl | Insalatiera  
19 cm | 7 1/2 in. **33019**




Doppelschälchen | Double bowl, small | Doppia coppetta  
20 x 8 cm | 8 in. **35378**

Schälchen bohnenförmig | Shallow bowl, bean-shaped |  
Coppetta a fagiolo  
12 x 7 cm | 4 3/4 in. **35379**

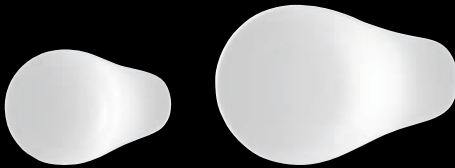 

Löffelschälchen klein | Shallow bowl spoon-shaped, small |  
Coppetta a cucchiaino, piccola  
11 x 8 cm | 4 1/3 in. **35382**

Löffelschälchen groß | Shallow bowl spoon-shaped, large |  
Coppetta a cucchiaino, grande  
16 x 11 cm | 6 1/3 in. **35383**

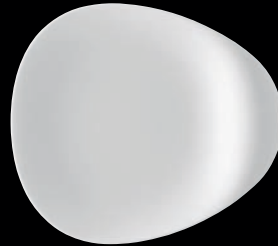 

Schale mit Griff | Bowl, with handle | Coppetta con manico  
18 x 16 cm | 7 in. **35384**



Universalschälchen | All purpose bowl | Cucchiaino/mestolino  
8 cm | 3 1/8 in. **35481**

Essenztaße | Essenz cup | Tazza essenza  
0,10 ltr. | 3 1/2 oz. **34700**



Dip-Schälchen | Dip bowl | Coppetta salsine  
10 cm | 4 in. **35410**



Salzstreuer | Salt | Spargisale  
**35030**


Pfefferstreuer | Pepper | Spargipepe  
**35035**

# ACCENTI TRE

 68

Rosenthal | Hotel & Restaurant Service | New Epoque | Accenti tre


Form | Shape | Forma  
14235 | Shanghai Express

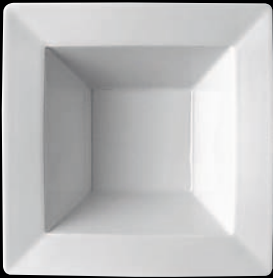

Schale tief | Bowl deep | Coppa fonda  
18 x 18 cm | 7 in. 25268  
30 x 30 cm | 12 in. 25280



Schälchen | Bowl, small | Coppetta  
12 x 12 cm | 4 3/4 in. 15390

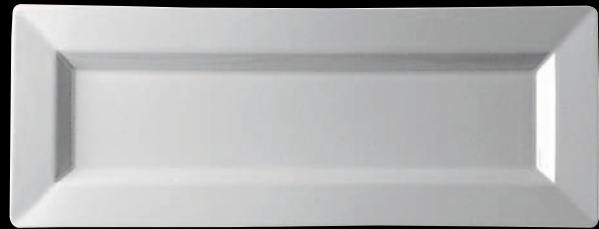 

Platte rechteckig | Platter rectangular | Piatto rettangolare  
39 x 15 cm | 15 1/3 in. 12372



Teelicht/Schälchen | Votive/bowl | Lumino/coppetta  
9 x 9 cm | 3 1/2 in. 25744



3-er Schälchen Halbmond | Accent bowl 3-part |  
Coppetta mezzaluna tris  
18 x 5 cm | 7 in. 25749



Menü-Teller | Menu plate | Piatto menù  
36 x 28 cm | 14 1/8 in. 15309


Form | Shape | Forma  
14085 | Shanghai Express



Schale flach | Bowl flat | Coppa piana  
14 x 14 cm | 5 1/2 in. 25814  
22 x 22 cm | 8 2/3 in. 25822  
30 x 30 cm | 12 in. 25830

Dekor | *Decor* | Decoro  
800001 | weiß | *white* | bianco


Form | *Shape* | Forma  
17000 | Suomi

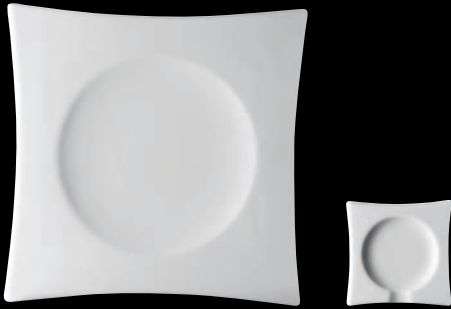 

Sushiteller | *Sushi plate* | Piatto sushi  
20 x 20 cm | 8 in. **10271**

Stäbchenablage/Sojaschälchen | *Chopstick stand/soja dish* |  
Portabacchette  
7 x 7 cm | 2 3/4 in. **15398**

Form | *Shape* | Forma  
14302

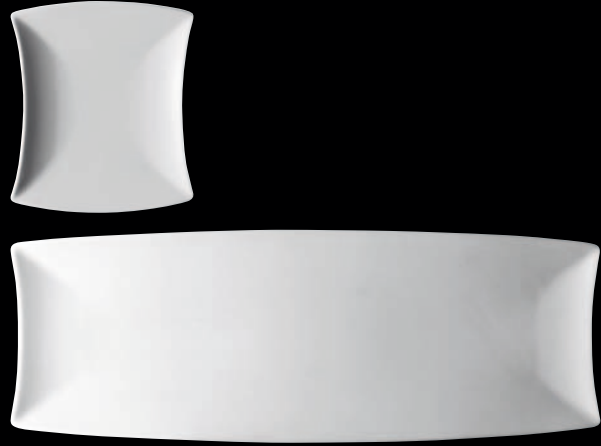 

Schälchen | *Bowl, small* | Coppetta  
14 x 12 cm | 5 1/2 in. **15390**

Platte rechteckig | *Platter rectangular* | Piatto rettangolare  
39 x 15 cm | 15 1/3 in. **25241**

Form | *Shape* | Forma  
12500 | Variation



Teller flach | *Plate flat* | Piatto piano  
16 cm | 6 1/4 in. **30016**  
19 cm | 7 1/2 in. **30019**  
22 cm | 8 2/3 in. **30022**  
25 cm | 9 7/8 in. **30025**  
27 cm | 10 5/8 in. **30027**  
30 cm | 11 3/4 in. **30030**

Form | *Shape* | Forma  
12116



Schale carré | *Bowl carré* | Coppa quadrata  
13 cm | 5 1/8 in. **25814**  
18 cm | 7 in. **25818**