

MODERN DINING

 
Dekor | *Decor* | Decoro
800001 | weiß | *white* | bianco

Form | *Shape* | Forma
11742 | Poncho



Schale | *Bowl* | Coppa
21 cm | 8 1/4 in. **35421**
Teller tief | *Plate deep* | Piatto fondo
24 cm | 9 1/2 in. **30124**
Teller flach | *Plate flat* | Piatto piano
23 cm | 9 in. **30023**
30 cm | 11 3/4 in. **30030**

Form | *Shape* | Forma
11744 | Origami

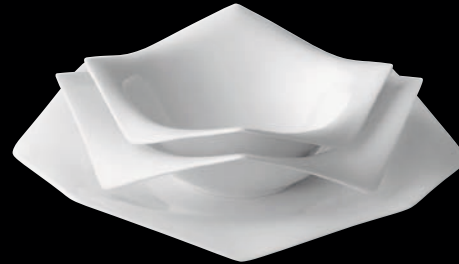

Schale | *Bowl* | Coppa
20 cm | 7 7/8 in. **35420**
Teller tief | *Plate deep* | Piatto fondo
25 cm | 9 7/8 in. **30125**
Teller flach | *Plate flat* | Piatto piano
24 cm | 9 1/2 in. **30024**
30 cm | 11 3/4 in. **30030**

Form | *Shape* | Forma
11745 | Nimbus




Schale | *Bowl* | Coppa
19 cm | 7 1/2 in. **35419**
Teller tief | *Plate deep* | Piatto fondo
23 cm | 9 in. **30123**
Teller flach | *Plate flat* | Piatto piano
22 cm | 8 2/3 in. **30022**
29 cm | 11 3/8 in. **30029**

Form | *Shape* | Forma
11746 | Papyrus



Schale | *Bowl* | Coppa
18 cm | 7 in. **35418**
Teller tief | *Plate deep* | Piatto fondo
22 cm | 8 2/3 in. **30122**
Teller flach | *Plate flat* | Piatto piano
23 cm | 9 in. **30023**
29 cm | 11 3/8 in. **30029**

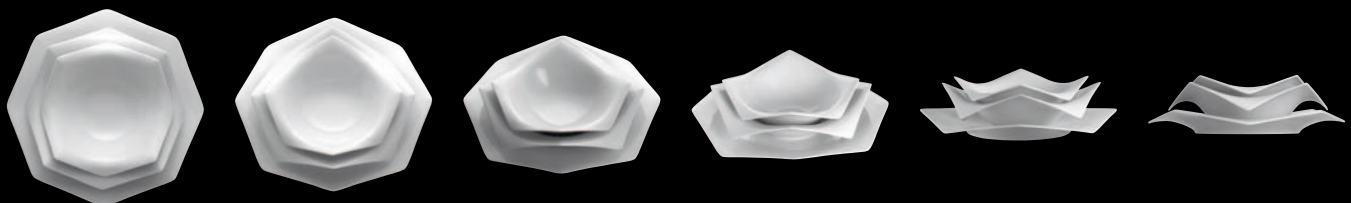 

MODERN DINING

Form | Shape | Forma
11741 | Tatami

90

Rosenthal | Hotel & Restaurant Service | Modern Dining



Obertasse | Cup | Tazza
0,09 ltr. | 3 1/8 oz. 34745

Untertasse | Saucer | Piattino
12 x 12 cm | 4 3/4 in. 34611



Obertasse | Cup | Tazza
0,18 ltr. | 6 1/3 oz. 34827
0,22 ltr. | 7 3/4 oz. 34752

Untertasse | Saucer | Piattino
16 x 16 cm | 6 1/3 in. 34741



Obertasse | Cup | Tazza
0,36 ltr. | 12 2/3 oz. 34743

Untertasse | Saucer | Piattino
16 x 16 cm | 6 1/3 in. 34741



Becher mit Henkel | Mug with handle | Mug con manico
0,36 ltr. | 12 2/3 oz. 34902

Untertasse | Saucer | Piattino
16 x 16 cm | 6 1/3 in. 34741



Schale | Bowl | Coppa
21 cm | 8 1/4 in. 35421

Teller tief | Plate deep | Piatto fondo
26 cm | 10 1/4 in. 30126


Teller flach | Plate flat | Piatto piano
24 cm | 9 1/2 in. 30024
31 cm | 12 1/4 in. 30031

Dekore | Decors | Decori

414506 | satin-gloss

weiß | white | bianco | 

414507 | satin-gloss Platinum | 

414508 | satin-gloss Gold | 



Dekor | Decor | Decoro
 800001 | weiß | white | bianco

Form | Shape | Forma
 11743 | Scoop



Schale | Bowl | Coppa
 16 cm | 6 1/4 in.

35416






Teller tief | Plate deep | Piatto fondo
 25 cm | 9 7/8 in.

30125

Teller flach | Plate flat | Piatto piano
 25 cm | 9 7/8 in.
 32 cm | 12 5/8 in.

30025

30032

Dekore | Decors | Decori
 414506 | satin-gloss
 weiß | white | bianco |  
 414507 | satin-gloss Platinum |  
 414508 | satin-gloss Gold | 



Obertasse | Cup | Tazza
 0,09 ltr. | 3 1/8 oz.

34745

Untertasse | Saucer | Piattino
 12 x 15 cm | 4 3/4 in.

34611



Obertasse | Cup | Tazza
 0,18 ltr. | 6 1/3 oz.
 0,22 ltr. | 7 3/4 oz.

34827

34752

Untertasse | Saucer | Piattino
 16 x 19 cm | 6 1/3 in.

34741



Obertasse | Cup | Tazza
 0,36 ltr. | 12 2/3 oz.

34743

Untertasse | Saucer | Piattino
 16 x 19 cm | 6 1/3 in.

34741



Becher mit Henkel | Mug with handle | Mug con manico
 0,35 ltr. | 12 1/3 oz.

34901

Untertasse | Saucer | Piattino
 16 x 19 cm | 6 1/3 in.

34741