



MODERN DINING

(512) 339-2456

 
Dekor | Decor | Decoro
800001 | weiß | white | bianco

Form | Shape | Forma
11742 | Poncho



Schale | Bowl | Coppa
21 cm | 8 1/4 in. **35421**
Teller tief | Plate deep | Piatto fondo
24 cm | 9 1/2 in. **30124**
Teller flach | Plate flat | Piatto piano
23 cm | 9 in. **30023**
30 cm | 11 3/4 in. **30030**

Form | Shape | Forma
11744 | Origami

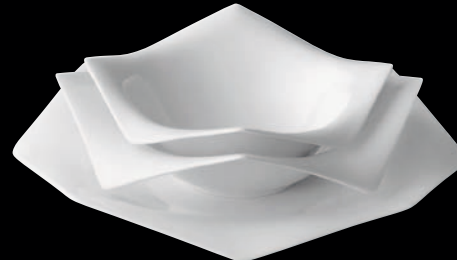

Schale | Bowl | Coppa
20 cm | 7 7/8 in. **35420**
Teller tief | Plate deep | Piatto fondo
25 cm | 9 7/8 in. **30125**
Teller flach | Plate flat | Piatto piano
24 cm | 9 1/2 in. **30024**
30 cm | 11 3/4 in. **30030**

Form | Shape | Forma
11745 | Nimbus




Schale | Bowl | Coppa
19 cm | 7 1/2 in. **35419**
Teller tief | Plate deep | Piatto fondo
23 cm | 9 in. **30123**
Teller flach | Plate flat | Piatto piano
22 cm | 8 2/3 in. **30022**
29 cm | 11 3/8 in. **30029**

Form | Shape | Forma
11746 | Papyrus



Schale | Bowl | Coppa
18 cm | 7 in. **35418**
Teller tief | Plate deep | Piatto fondo
22 cm | 8 2/3 in. **30122**
Teller flach | Plate flat | Piatto piano
23 cm | 9 in. **30023**
29 cm | 11 3/8 in. **30029**

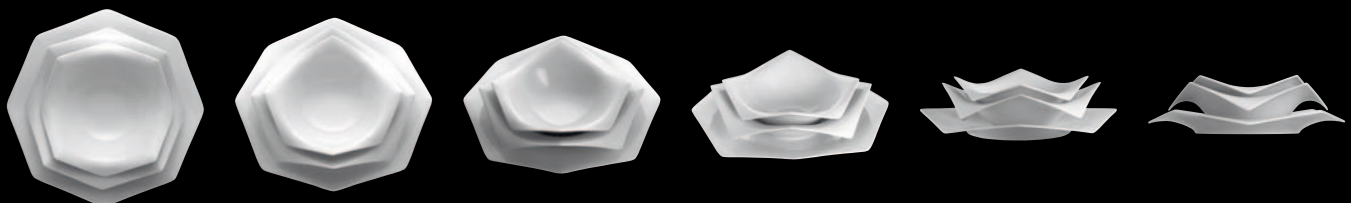 

MODERN DINING



(512) 339-2456

Form | Shape | Forma
11741 | Tatami

90

Rosenthal | Hotel & Restaurant Service | Modern Dining



Obertasse | Cup | Tazza
0,09 ltr. | 3 1/8 oz. 34745

Untertasse | Saucer | Piattino
12 x 12 cm | 4 3/4 in. 34611



Obertasse | Cup | Tazza
0,18 ltr. | 6 1/3 oz. 34827

0,22 ltr. | 7 3/4 oz. 34752

Untertasse | Saucer | Piattino
16 x 16 cm | 6 1/3 in. 34741



Obertasse | Cup | Tazza
0,36 ltr. | 12 2/3 oz. 34743

Untertasse | Saucer | Piattino
16 x 16 cm | 6 1/3 in. 34741



Becher mit Henkel | Mug with handle | Mug con manico
0,36 ltr. | 12 2/3 oz. 34902

Untertasse | Saucer | Piattino
16 x 16 cm | 6 1/3 in. 34741



Schale | Bowl | Coppa
21 cm | 8 1/4 in. 35421

Teller tief | Plate deep | Piatto fondo
26 cm | 10 1/4 in. 30126

Teller flach | Plate flat | Piatto piano
24 cm | 9 1/2 in. 30024


31 cm | 12 1/4 in. 30031

Dekore | Decors | Decori

414506 | satin-gloss

weiß | white | bianco |  

414507 | satin-gloss Platinum | 

414508 | satin-gloss Gold | 



Dekor | *Decor* | Decoro
800001 | weiß | *white* | bianco

Form | *Shape* | Forma
11743 | Scoop



Schale | *Bowl* | Coppa
16 cm | 6 1/4 in.

35416

Teller tief | *Plate deep* | Piatto fondo
25 cm | 9 7/8 in.

30125

Teller flach | *Plate flat* | Piatto piano
25 cm | 9 7/8 in.
32 cm | 12 5/8 in.


30025

30032

Dekore | *Decors* | Decori
414506 | satin-gloss

weiß | *white* | bianco |  

414507 | satin-gloss Platinum |  

414508 | satin-gloss Gold | 



Obertasse | *Cup* | Tazza
0,09 ltr. | 3 1/8 oz.

34745

Untertasse | *Saucer* | Piattino
12 x 15 cm | 4 3/4 in.

34611



Obertasse | *Cup* | Tazza
0,18 ltr. | 6 1/3 oz.
0,22 ltr. | 7 3/4 oz.

34827

34752

Untertasse | *Saucer* | Piattino
16 x 19 cm | 6 1/3 in.

34741



Obertasse | *Cup* | Tazza
0,36 ltr. | 12 2/3 oz.

34743

Untertasse | *Saucer* | Piattino
16 x 19 cm | 6 1/3 in.

34741



Becher mit Henkel | *Mug with handle* | Mug con manico
0,35 ltr. | 12 1/3 oz.

34901

Untertasse | *Saucer* | Piattino
16 x 19 cm | 6 1/3 in.

34741