

NIDO

Form | Shape | Forma
10920 | Nido



Teekannen-Unterteil | *Base teapot* | Teiera senza coperchio
0,40 ltr. | 14 oz. **34211**
Deckel | *Lid* | Coperchio **34212**



Kaffeekannen-Unterteil | *Base coffee pot* | Caffettiera senza coperchio
0,30 ltr. | 10 1/2 oz. **34001**
Deckel | *Lid* | Coperchio **34002**

144

Rosenthal | Hotel & Restaurant Service | Nido | 10920



Gießer | *Creamer* | Lattiera
0,20 ltr. | 7 oz. **34420**



Zuckerdosens-Unterteil | *Base sugar bowl* | Zuccheriera senza coperchio
0,28 ltr. | 9 7/8 oz. **34346**
Deckel mit Einschnitt | *Lid with indent* | Coperchio con tacca
34348



Untertasse oval | *Saucer oval* | Piattino ovale
19 cm | 7 1/2 in. **34742**
für Tassen | *for cups* | per tazze **34737, 34739, 34743**
für Becher | *for mug* | per mug **34655**
für Zuckerdose | *for sugar bowl* | per zuccheriera **34346**

Dekor | Decor | Decoro
800001 | weiß | white | bianco



Obertasse | Cup | Tazza
0,10 ltr. | 3 1/2 oz. **34812**
Untertasse | Saucer | Piattino
13 cm | 5 1/8 in. **34621**



Obertasse stapelbar | Cup stackable | Tazza impilabile
0,10 ltr. | 3 1/2 oz. **34673**
Untertasse | Saucer | Piattino
13 cm | 5 1/8 in. **34621**



Obertasse | Cup | Tazza
0,18 ltr. | 6 1/3 oz. **34827**
0,22 ltr. | 7 3/4 oz. **34642**
Untertasse | Saucer | Piattino
15 cm | 6 in. **34636**



Obertasse stapelbar | Cup stackable | Tazza impilabile
0,18 ltr. | 6 1/3 oz. **34682**
0,22 ltr. | 7 3/4 oz. **34697**
Untertasse | Saucer | Piattino
15 cm | 6 in. **34636**



Obertasse | Cup | Tazza
0,28 ltr. | 9 7/8 oz. **34737**
0,36 ltr. | 12 2/3 oz. **34743**
Untertasse | Saucer | Piattino
16 cm | 6 1/4 in. **34741**



Obertasse stapelbar | Cup stackable | Tazza impilabile
0,28 ltr. | 9 7/8 oz. **34739**
Untertasse | Saucer | Piattino
16 cm | 6 1/4 in. **34741**




Becher mit Henkel | Mug with handle | Mug con manico
0,30 ltr. | 10 1/2 oz. **34655**
Untertasse | Saucer | Piattino
16 cm | 6 1/4 in. **34741**



Becher stapelbar | Mug stackable | Mug impilabile
0,25 ltr. | 8 3/4 oz. **34666**
Untertasse | Saucer | Piattino
15 cm | 6 in. **34636**

NIDO

Form | Shape | Forma
10920 | Nido



Teller flach | Plate flat | Piatto piano

13 cm 5 1/8 in.	30013
16 cm 6 1/4 in.	30016
21 cm 8 1/4 in.	30021
25 cm 9 7/8 in.	30025
28 cm 11 in.	30028
33 cm 13 in.	30033



Gourmetteller tief | Gourmet plate deep | Piatto gourmet fondo

17 cm 6 2/3 in.	31517
22 cm 8 2/3 in.	31522
28 cm 11 in.	31528
33 cm 13 in.	31533

146

Rosenthal | Hotel & Restaurant Service | Nido | 10920



Suppentasse | Soup cup | Tazza brodo
0,30 ltr. | 10 1/2 oz. 30430

Untertasse | Saucer | Piattino
18 cm | 7 in. 30429



Platte oval | Platter oval | Piatto ovale

24 cm 9 1/2 in.	32624
28 cm 11 in.	32628
34 cm 13 1/2 in.	32634
42 cm 16 1/2 in.	32642

Dekor | *Decor* | Decoro
800001 | weiß | *white* | bianco



Sauciere mit Henkel | *Sauceboat* | Salsiera
0,50 ltr. | 17 1/2 oz. **31620**

Untertasse | *Saucer* | Piattino
18 cm | 7 in. **30429**



Müsli / Kompottschale | *Cereal / fruit bowl* | Coppetta cereali
12 cm | 4 3/4 in. **30532**

Untertasse | *Saucer* | Piattino
18 cm | 7 in. **30429**



Bowl / Schüssel tief | *Bowl deep* | Coppa fonda
12 cm | 4 3/4 in. **30612**



Schüssel | *Salad bowl* | Insalatiera
15 cm | 6 in. **33015**
20 cm | 7 7/8 in. **33020**
27 cm | 10 5/8 in. **33027**



Dipschale oval | *Dip bowl oval* | Coppetta salsine
9 cm | 3 1/2 in. **35491**