

NIDO



(512) 339-2456

Form | Shape | Forma
10920 | Nido



Teekannen-Unterteil | *Base teapot* | Teiera senza coperchio
0,40 ltr. | 14 oz. **34211**
Deckel | *Lid* | Coperchio **34212**



Kaffeekannen-Unterteil | *Base coffee pot* | Caffettiera senza coperchio
0,30 ltr. | 10 1/2 oz. **34001**
Deckel | *Lid* | Coperchio **34002**

144

Rosenthal | Hotel & Restaurant Service | Nido | 10920



Gießer | *Creamer* | Lattiera
0,20 ltr. | 7 oz. **34420**



Zuckerdosens-Unterteil | *Base sugar bowl* | Zuccheriera senza coperchio
0,28 ltr. | 9 7/8 oz. **34346**
Deckel mit Einschnitt | *Lid with indent* | Coperchio con tacca
34348



Untertasse oval | *Saucer oval* | Piattino ovale
19 cm | 7 1/2 in. **34742**
für Tassen | *for cups* | per tazze **34737, 34739, 34743**
für Becher | *for mug* | per mug **34655**
für Zuckerdose | *for sugar bowl* | per zuccheriera **34346**

Dekor | *Decor* | Decoro
800001 | weiß | *white* | bianco



Obertasse | *Cup* | Tazza
0,10 ltr. | 3 1/2 oz. **34812**

Untertasse | *Saucer* | Piattino
13 cm | 5 1/8 in. **34621**



Obertasse stapelbar | *Cup stackable* | Tazza impilabile
0,10 ltr. | 3 1/2 oz. **34673**

Untertasse | *Saucer* | Piattino
13 cm | 5 1/8 in. **34621**



Obertasse | *Cup* | Tazza
0,18 ltr. | 6 1/3 oz. **34827**
0,22 ltr. | 7 3/4 oz. **34642**

Untertasse | *Saucer* | Piattino
15 cm | 6 in. **34636**



Obertasse stapelbar | *Cup stackable* | Tazza impilabile
0,18 ltr. | 6 1/3 oz. **34682**
0,22 ltr. | 7 3/4 oz. **34697**

Untertasse | *Saucer* | Piattino
15 cm | 6 in. **34636**



Obertasse | *Cup* | Tazza
0,28 ltr. | 9 7/8 oz. **34737**
0,36 ltr. | 12 2/3 oz. **34743**

Untertasse | *Saucer* | Piattino
16 cm | 6 1/4 in. **34741**



Obertasse stapelbar | *Cup stackable* | Tazza impilabile
0,28 ltr. | 9 7/8 oz. **34739**

Untertasse | *Saucer* | Piattino
16 cm | 6 1/4 in. **34741**



Becher mit Henkel | *Mug with handle* | Mug con manico
0,30 ltr. | 10 1/2 oz. **34655**

Untertasse | *Saucer* | Piattino
16 cm | 6 1/4 in. **34741**



Becher stapelbar | *Mug stackable* | Mug impilabile
0,25 ltr. | 8 3/4 oz. **34666**


Untertasse | *Saucer* | Piattino
15 cm | 6 in. **34636**



NIDO

(512) 339-2456

Form | Shape | Forma
10920 | Nido

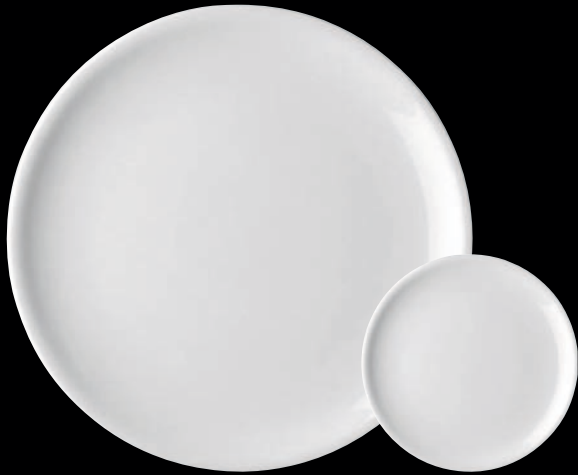

Teller flach | *Plate flat* | Piatto piano
13 cm | 5 1/8 in. **30013**
16 cm | 6 1/4 in. **30016**
21 cm | 8 1/4 in. **30021**
25 cm | 9 7/8 in. **30025**
28 cm | 11 in. **30028**
33 cm | 13 in. **30033**



Gourmetteller tief | *Gourmet plate deep* | Piatto gourmet fondo
17 cm | 6 2/3 in. **31517**
22 cm | 8 2/3 in. **31522**
28 cm | 11 in. **31528**
33 cm | 13 in. **31533**



Platte oval | *Platter oval* | Piatto ovale
24 cm | 9 1/2 in. **32624**
28 cm | 11 in. **32628**
34 cm | 13 1/2 in. **32634**
42 cm | 16 1/2 in. **32642**



Suppentasse | *Soup cup* | Tazza brodo
0,30 ltr. | 10 1/2 oz. **30430**
Untertasse | *Saucer* | Piattino
18 cm | 7 in. **30429**



(512) 339-2456

Dekor | *Decor* | Decoro
800001 | weiß | *white* | bianco



Sauciere mit Henkel | *Sauceboat* | Salsiera
0,50 ltr. | 17 1/2 oz. **31620**

Untertasse | *Saucer* | Piattino
18 cm | 7 in. **30429**



Müsli / Kompottschale | *Cereal / fruit bowl* | Coppetta cereali
12 cm | 4 3/4 in. **30532**

Untertasse | *Saucer* | Piattino
18 cm | 7 in. **30429**



Bowl / Schüssel tief | *Bowl deep* | Coppa fonda
12 cm | 4 3/4 in. **30612**



Schüssel | *Salad bowl* | Insalatiera
15 cm | 6 in. **33015**
20 cm | 7 7/8 in. **33020**
27 cm | 10 5/8 in. **33027**



Dipschale oval | *Dip bowl oval* | Coppetta salsine
9 cm | 3 1/2 in. **35491**